

# 重点校对项

1. 版面尺寸

2. 材质标注

3. 物料编码

4. 颜色标注

5. 客户型号

6. 产品名称

7. 重量标注

8. 电压功率

1	2	3	4	5	6
项目					
库					
文件名					

A

B

C


D

E

F

G

H

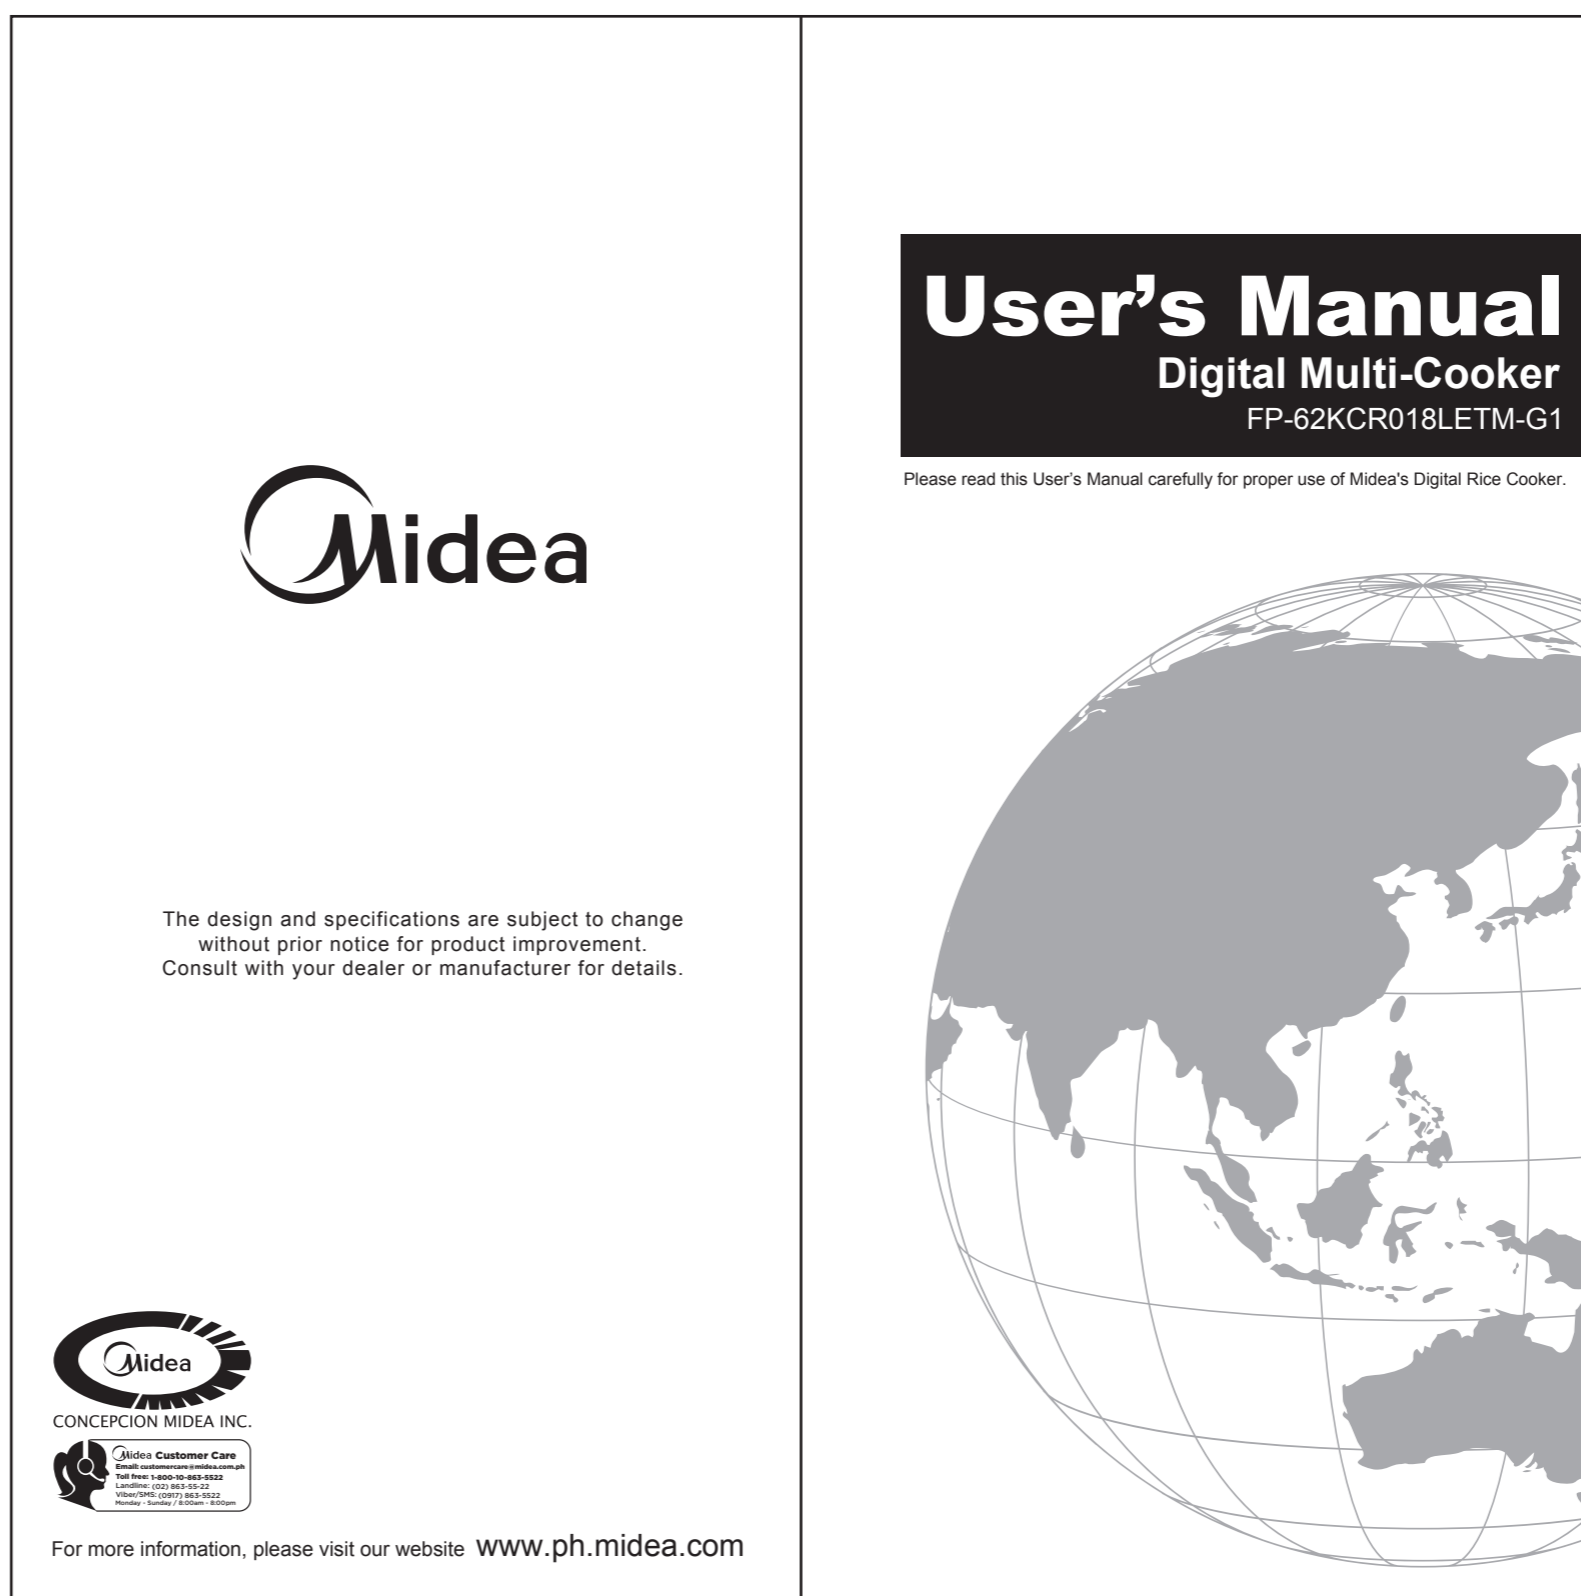

封底

封面

技术要求(版本号: A, 2017-01)

1. 颜色: 单黑 (Pantone Black C)
2. 尺寸 (mm) : 145x210mm
3. 双面印刷, 订装

16161000A08710

					电饭煲		MIDEA-MB-FS5018D(FP-62KCR018LETM-G)-0501						
					说明书		材料: 105g铜版纸						
@	2	更新网址	张晓	20190705	图样标记		重量		比例				
标记	处数	更改文件号	签字	日期									
制图	张晓	审核	卢灿飞										
设计	-----	标准化	古广君										
校对	-----	审定	古广君		K			1:1	广东美的电热电器制造有限公司				
会签	-----	日期	20181203	共	页	第	页						

1

2

3

4

5

6

A

B

C

D

E

F

G

H



The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.



CONCEPCION MIDEA INC.



For more information, please visit our website [www.ph.midea.com](http://www.ph.midea.com)

# User's Manual

## Digital Multi-Cooker

FP-62KCR018LETM-G1

Please read this User's Manual carefully for proper use of Midea's Digital Rice Cooker.



# Table of Contents

Safety warning	FORBIDDEN, MANDATORY, NOITNETTA	01 03 04
Product overview	Parts and features Accessories list Operation panel	05 05 06
Instructions for use	Quick start guide Functional description	06 07
Care and Cleaning	Disassemble the lid plate for cleaning Steam valve cleaning Cleaning the cooker body	11 11 12
Service guide	Technical data of the product Circuit principle diagram Anomaly self-checking	13 13 14

## Safety warning

### Reminder

Basic safety precautions should always be followed to ensure secure use and avoid injury and/or property loss to user and others.

### Note

Conditions unconsidered:  
the appliance is used by unsupervised children or the disabled.  
the appliance is played with by children.

### ⊘ Represents [FORBIDDEN] content



Prohibit the use of inferior plugs



Prohibit wet hands from touching



Prohibit combustible products



Prohibit children from operating

- This appliance is for household use only. Do not use outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, office and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.

## Safety warning

- Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use
- Do not immerse any part of the appliance in water or other liquid.
- The heating element surface is subject to residual heat after use, do not touch.
- Warning: Avoid spillage on the connector.
- Warning: Misuse may cause potential injury.
- Keep the appliance away from combustibles. During operation, stay away from curtains, drapes, curtain Or in similar articles to avoid the risk of fire.
- Do not use the appliance for food that may cause vent clogging: food in sheets (e.g. laver and Chinese cabbage), food in bands (e.g. kelp), food in pieces (e.g. corn dregs), to avoid accident and damage to the appliance.
- During operation, do not place your hands or face close to the steam vent to avoid burns.
- During operation, do not cover the steam vent with cloth or other articles to avoid accident and damage to the appliance.
- Do not reform the appliance: except for maintenance technicians, persons are not allowed to disassemble or repair the appliance to avoid the risk of fire, electric shock and injury to persons.
- Do not use the appliance on any voltage except for 220~240V AC to avoid the risk of fire and electric shock. In case of power wire damage, do not use the appliance.

## Safety warning

- Do not operate the appliance in the following ways to avoid fire risk and electric shock due to power line damage: Forcibly bend the power cord, keep it close to high-temperature objects, tie up the line or use it to carry weights.
- In case of power plug damage, do not use the appliance to avoid the risk of fire, electric shock and short circuit.
- Do not pull the plug with wet hands to avoid electric shock and injury to persons.
- During operation, do not move or shake the appliance.
- Keep the appliance out of the reach of unsupervised children and babies to avoid dangerous accidents such as electric shock and burns.
- Do not put the appliance in unsteady, damp places or close to other fire and heat sources (e.g. stove). The optimum distance is 30cm. Otherwise, damage or accident may happen to the appliance.
- Do not insert pin, iron wire or other articles into the steam vent at the bottom of the appliance to avoid electric shock and injury to persons.

### ! Represents [MANDATORY] contents

- Don't immerse the appliance in water or drench with water.
- Independently use grounding socket with rated current of above 10A. When used with Others electrical appliances, the socket will go wrong and lead to dangers such as fire disaster.
- If the power line is too short, user should use an extension socket for connection. Please do not use poor-quality socket. The power consumption of the appliances must not exceed the maximum load of the extension socket.
- Clean the dust and water on both ends of the power line and the socket of the appliance to avoid the risk of fire, electric shock and short circuit.

## Safety warning

- When maintenance or parts replacement is necessary, please deliver the product to the authorized professional service centre for maintenance of Midea. to avoid hidden dangers caused by improper maintenance or improper selection of accessories.
- The plug should be thoroughly inserted into the socket to avoid the risk of fire, electric shock and short circuit.
- In case of supply cord damage, the cord should be replaced by professionals of the Manufacturer, the Maintenance Department or similar.
- The appliance is for household use only.

Note: Improper repair or short-circuiting without permission of some important accessories including fuse may lead to protection failure of the appliance and cause overheating or fire.

### Represents [ATTENTION] Matters that may cause minor injuries or property loss

- The appliance can only use the original cooking pot to avoid overheating and anomaly.
- Do not drop the cooking pot to avoid deformation.
- Do not impact the cooking pot with hard materials to avoid deformation.
- When operation is being performed or just finished, do not directly touch the inner cooking pot to avoid burns.
- Before operation, wipe dry the water outside the cooking pot to avoid malfunction.
- Before operation, clean the foreign materials including water drops and rice to avoid overheating and short circuit.

### Represents [GENTLE REMINDER] content


- Any discrepancy between the picture and the product is subject to the real object.
- Before operation, check whether the cooking pot and steam valve are in place to avoid accident.
- Before the first usage or after a long time of storage, add water to the steam water level line, select "steam" function and steam for one to two times to clean the interior of the cooker.
- During use, it is normal that the appliance slightly ticks or fizzes. Please do not panic.
- Do not use the appliance immediately after the first cooking, press the "Cancel" button and wait above 15 minutes for the heating plate to cool down.
- Do not boil rice with hot water to avoid affecting the judgement of the temperature control and worsening the result.
- Please regularly clean the steam valve.
- Please regularly clean the countertop on which the appliance is placed.
- The altitude scope for the appliance to properly function is 0~2000m.
- When maintenance or parts replacement is necessary, please deliver the product to the authorized service centre for maintenance of Midea to obtain professional quality service. Please keep the manual for future reference. Thank you.

## Product overview

### Parts and features

#### Note

All the drawings in this manual are for functional reference only. There are differences in the physical products due to different product types and batches.

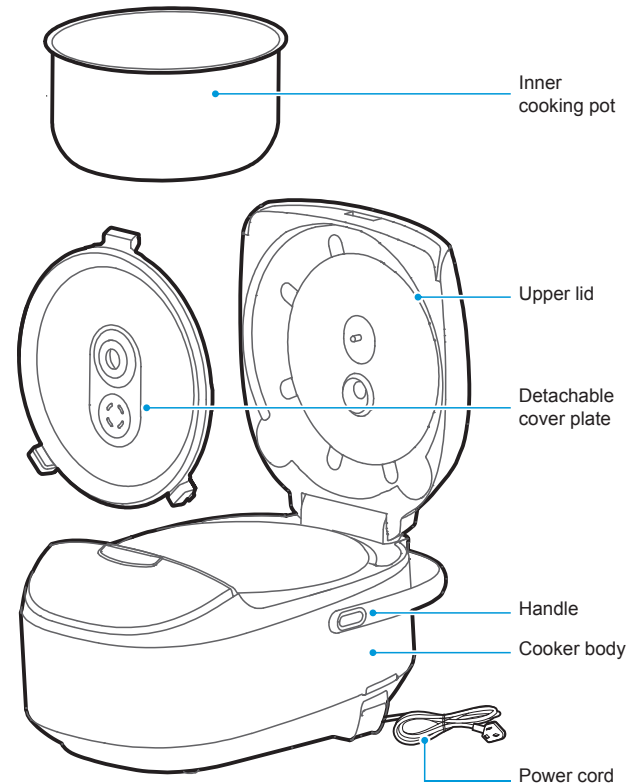

### Accessories list



Standing rice spoon X1



Hanging soup spoon X1




Measurement cup X1



Steamer X1

# Product overview

## Control Panel

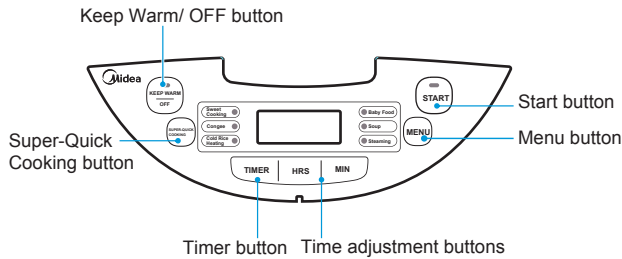

# Instructions for use

## Quick start guide


### Reserve cooking

For example, pre-set 3 measurement cups of long grain rice for cooking the essence rice, and completes after 8 hours.

### 1 Prepare rice and water

Eg: Cook 3 cups of long grain rice

Place the rinsed rice into the inner pot and choose the appropriate water level according to rice amount.

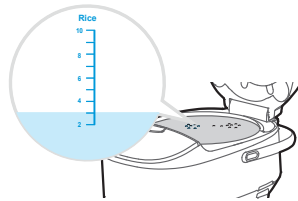

### 2 Menu selection

Close the rice cooker lid, press the "MENU" button, select the features you need (such as "Sweet Cooking").

 


# Instructions for use

### 3 Set the timer for cooking completion

#### Gentle Reminder:

Display status refers to actual product; Press the "Timer" button, enter the pre-set time adjustment mode, then press "Hour" or "Minute" button to adjust the pre-set time. (When there are no "Hour" and "Minute" buttons, press the "Timer" button to adjust the pre-set time)



### 4 Start cooking

Press "Start" button, the cooking will be finished at appointed time.



### 5 Cancel cooking

Press the "Keep warm/Off" button can cancel the selected cooking function.



#### Gentle Reminder:

- The time displayed under pre-set timer mode is the length of time from the start to the completion of cooking;
- The pre-set the time is suggested not for more than 12 hours, otherwise the off-flavor may occur;
- To ensure "Cold Rice Heating" functions do not have pre-set time mode;
- The selected cooking function's pre-set time should not be less than the cooking time, such as "Congee", the cooking time is 2 hours, the pre-set time should be more than 2 hours, otherwise cooking will started immediately.

## Menu description

#### "MENU" buttons user instructions:

Press the "MENU" button, the indicated light is at the selected function. After selecting the desired function, Press the "Start" button to start the selected function.

MENU ▷ Sweet Cooking/Congee/Cold Rice Heating/Baby Food Soup/Steaming


Regarding the special instructions on "Super-Quick Cooking".

The "Super-Quick Cooking" function is based on the principle of Midea's rice cooker "FiveTrilogy" cooking program. When the amount of rice and other factors are the same, the cooking time is shorter than "Sweet Cooking".

# Instructions for use

Steaming For products with this function only.

- 1 Add water to the “Steaming water level” mark, and put the food on the steamer or steaming rack, then put into the inner pot.

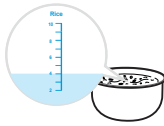

- 2 Close the lid, press the “MENU” button to select the “Steaming” function.



- 3 Press the “Start” button and wait for cooking to be complete.




## Gentle Reminder:

- Steaming time can be adjusted, the time range is from 1 to 60 minutes. The default Steaming time is from the moment that boiled to the end of the process, not the time required for entire steaming process.

Soup For products with this function only.

- 1 Prepare soup ingredients (such as pig bone, corn, carrots etc.), wash all ingredients and cut into small pieces, then put them into the inner pot, and add water no more than maximum water line.

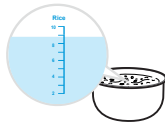

- 2 Close the lid, press the “MENU” button to select the “Soup”.



- 3 Press the “Start” button and wait for cooking to be complete.



# Instructions for use

Cold Rice Heating

When using Cold Rice Heating function, the maximum amount of rice cannot exceed Mark 4.

- 1 Loosen the rice; sprinkle 50-80 grams of water on the surface of the rice (take the amount of rice below the Mark 2 as an example).



- 2 Press “MENU” button to select the “Cold Rice Heating” function and press the start button.



- 3 Press the “Start” button and wait for cooking to be complete.



Keep warm

- 1 Press “Keep warm/OFF” button to enter warm-keeping mode.



- 2 It is recommended that the rice should be loosened within 30 minutes under warm-keeping mode, the taste will be better.



## Gentle Reminder:


- After all functions finished cooking, it will automatically enter the warm-keeping mode;
- During the process of warm keeping, the product will be heated to maintain the temperature above 65 degrees Celsius.
- The product can achieve 24-hours water keeping function;

# Instructions for use

## The use of water level lines

The water level lines of inner pot are physically different due to product models and batches.

rice congee porridge

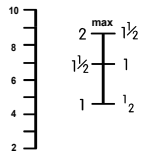

### Water Level Line

**Rice:** Refer to the corresponding water level according to the type of rice when adding water.

### Rice

Specification	Maximum rice amount	Minimum rice amount
FP-62KCR018LETM-G1	10 cups	2 cups

**Congee:** Refer to the congee water line when adding water.

### Congee

Specification	Maximum rice amount	Minimum rice amount
FP-62KCR018LETM-G1	10 cups	2 cups

**Steaming:** When steaming, please add water according to the inner pot steaming water line, too much water will cause the water overflowing when it is boiling, and too little will cause it to become uncooked.


# Care and Cleaning

## Disassemble the lid plate for cleaning

### ⚠ Note

Make sure the product is not connected to power supply when cleaning.

- 1 Press white button, pull outwards and remove the lid.

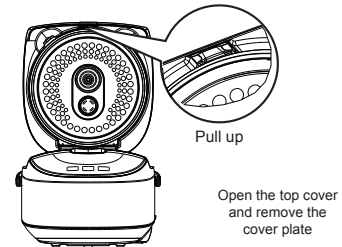


- 2 Rinse the whole cover with water and wipe it dry with cloth;



- 3 Align top lid slot band insert the lid, press the lid near the button, when hears a "click" sound then the installation is complete.

## Steam valve cleaning


- 1 Pull it up and remove the steam valve.

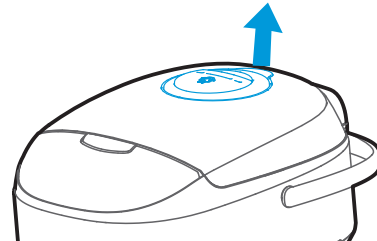



## Care and Cleaning


- 2 According to the disassembly mark on the steam valve, after dismantling, clean the steam valve inside, then install it according to the disassembly and installation mark.

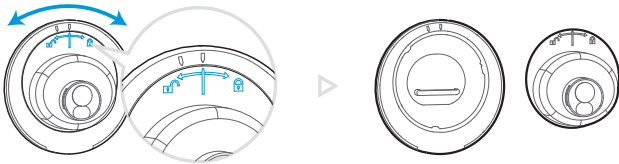


- 3 Simply press the steam valve back in place with strength while installing.

## Cleaning the cooker body

- 1 Wipe the inner lid with a damp cloth; do not wash directly with water.

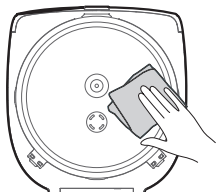

- 2 Use a clean cloth to clean the water, rice grain and other debris on the water storage tank and heating plate.

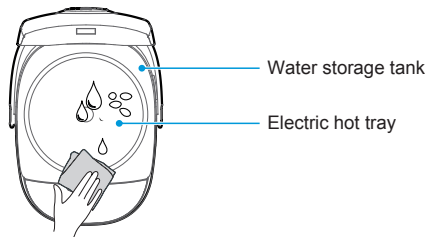

- 3 Wipe the bottom and outer surface of the inner pot with a clean cloth.



## Service guide


### Technical data of the product

Model	Rated voltage/ Rated frequency	Rated power	Rated Capacity	Rice amount
FP-62KCR018LETM-G1	230V~ 60Hz	940W	1.8L	2-10 Cup

### Circuit principle diagram

#### Reminder

The electrical wiring is subject to change without prior notice.

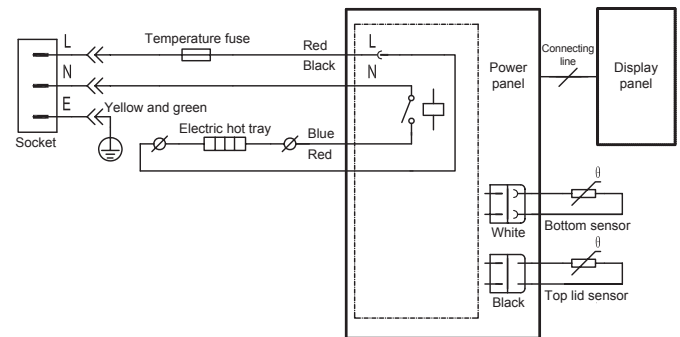

## Anomaly self-checking

When you think that cooking is not normal, please check the following conditions to confirm if it is really a malfunction.

Abnormal situation	Sweet Cooking, Congee, Cold Rice Heating, Baby Food, Soup, Steaming								Keep warm					
	Too hard	Too soft	Not cooked	Odour	Rice stuck on pot	Crispy/burned rice	Rice soup overflow	Porridge/soup/ congee too thick	Not boiling	Warm preservation not working	Odour	Discoloration	Rice surface is dry	Water dripping
Items to check														
Rice and water quantity is incorrect	●	●	●		●	●	●	●	●					
Exceed the maximum quantity	●	●	●		●	●	●		●					
Correct function selection	●	●	●		●	●	●	●	●					
Whether the inner pot is deformed or uneven at the bottom	●	●	●		●	●			●					
Cooking with hot water or continuous cooking without cooling	●	●	●		●				●					
Rice or foreign objects stick on the bottom of the inner pot, heating plate or thermostat	●	●	●	●	●	●			●		●	●	●	●
Power outage	●	●	●	●	●	●		●	●	●	●			●
Stir loose rice after cooking	●				●						●	●	●	
Whether the steam valve installed properly	●						●	●						●
Pre-set time too long	●		●	●				●						
Top lid closed properly			●				●	●		●	●	●		
Rice not washed properly	●		●	●	●	●				●	●			
Rice or foreign objects stick on the seal ring or inner pot edge											●	●	●	
Warm preservation timer set too long	●									●	●	●	●	
Keep too long with no warm preservation setting									●	●	●	●	●	
The inner pot is not washed properly				●						●				
Rice spoon inside the inner pot										●	●	●	●	
Water and rice is not stirred well			●											

After the inspection of the above conditions, if it is confirmed that there is a malfunction, please send it to the local maintenance network for repairing.